


**M240B  
OVERHEAD FIRE  
MOUNT**

**Mounting Instructions**

Step 1

Place MK 64  
Mount into  
Pedestal

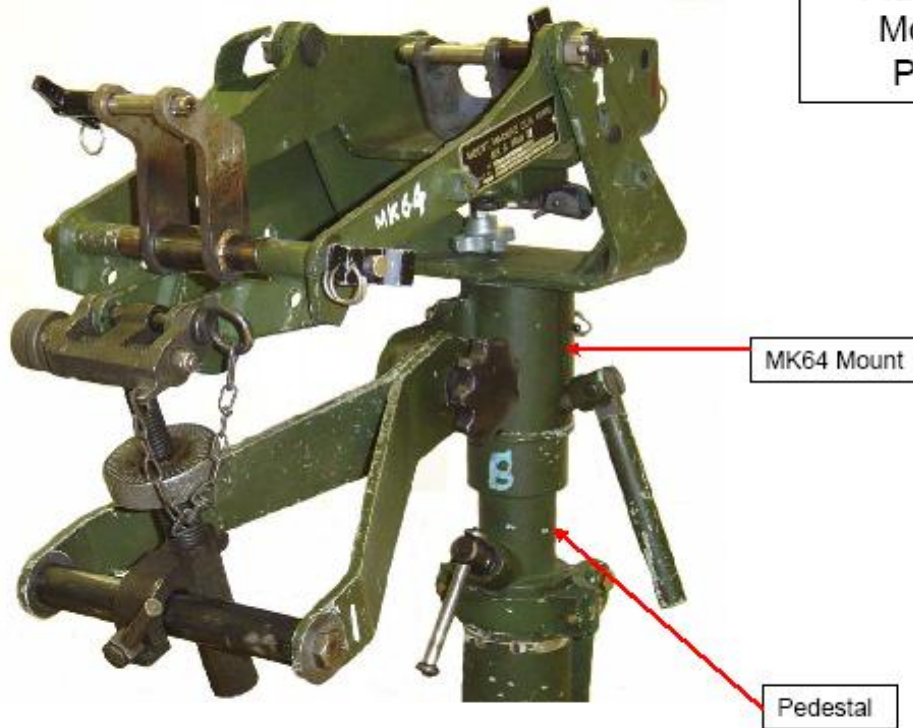



## Step 2

Mount front pintle  
onto M240B.  
Insert pin from  
right to left.

Pintal



### Step 3

Place gun and pintle into MK 64 Mount. (Note: Barrel must go into barrel restriction device first.) Lift up on weapon to ensure pintle is locked into MK 64.



Barrel restriction device



TACOM butt stock  
restraining device

#### Step 4

Raise TACOM butt stock restraining device over butt stock, and secure with modified padlock into Sling Attaching Point (Note: Long shank padlock has cross bar welded across hasp to prevent turning padlock and slipping out of TACOM restraining device.)



### Step 5

Emplace rear mounting pin  
into rear mounting  
bracket from left to right.

Rear mounting pin



### Step 6

Tighten pedestal retaining screw to secure MK64 mount to pedestal.

pedestal retaining screw

## Step 7

After zeroing weapon screw the depression stop down on the mount frame and tighten the lock nut. (Note – Check aim point before and after you tighten the lock nut as you can raise the aim point when doing this.)



Lock nut

Depression stop





